


N.11

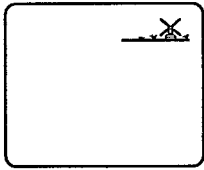

■ **MODE ON/OFF**

This mode is used to permit watering or prevent any valve from opening. It overrides both manual or programmed valve opening.

Repeatedly press until this screen (N.11) appears with a blinking cross on the sprinkler. Connect the transmitter to the module and press the key to place the module in the "ON" mode. The cross will disappear. Any programmed or manual irrigation will take place.

If you press the key, the module will be placed in the "OFF" mode. A non-blinking cross appears on the sprinkler and all irrigation, either programmed or manual, will be prevented. This mode is useful during rainy weather (rainy weather shutdown). The irrigation program remains stored in the module.

Important: Make sure that the control module is in the "ON" mode before trying to manually open a valve with the field transmitter.

N.12



■ **LOW BATTERY ICON**

a) **Low battery in the field transmitter**


If the battery is low in the field transmitter, this screen (N.12) with the blinking low battery icon will appear after you press . Replace the battery in the field transmitter.

b) **Low battery in the control module**


After you transmit a program to a module or monitor a

program in a module, this screen (N.13) will appear if the battery in the module must be replaced.

N.13

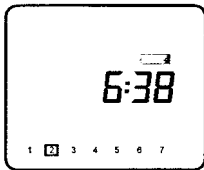

N.14

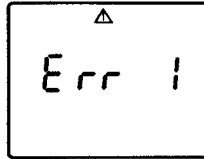


■ **ERR 1 MESSAGE (N.14)**

If the transmitter is incompatible with the control module, the Err 1 message will be displayed on the LCD. These are the possible reasons:

- New Micro 2000 field transmitter connected to a control module with a date code prior to October 2, 2000.
- In the manual mode, the number of the station entered to open or close a valve is higher than the number of stations in the module.

■ **ERASE PROGRAM DATA IN THE TRANSMITTER**

 This function erases all program data (MODE A and MODE B) in the transmitter except current time and day.



■ **DAILY OPERATION OF SOLENOIDS**

In order to stop a potential build-up of mineral deposits on the solenoids, Cyclik control modules will ensure that all solenoids open and close at least once every 24 hours, even during a long off-cycle. The Cyclik control modules will cycle all solenoids on and off for no more than 3 seconds, every 24 hours after the last valve closure. Whenever programmed operation is already opening or closing a solenoid within 24 hours, the 3 second anti-mineral cycle will not occur.

**Rain Bird Corporation
Agri-Products Division**
633 W. Foothill Blvd.
Glendora, CA 91741-2469
Phone: (800) 435-5624
Fax: (626) 852-7310

Rain Bird International, Inc.
145 N. Grand Ave.
Glendora, CA 91741-2469
Phone: (626) 963-9311
Fax: (626) 963-4287

www.rainbird.com

Rain Bird. The Intelligent Use of Water.™

® Registered trademark of Rain Bird Corporation


© 2003 Rain Bird Corporation 3/03

PN L364



CYCLIK™ Micro

■ Programming Guide Mode A

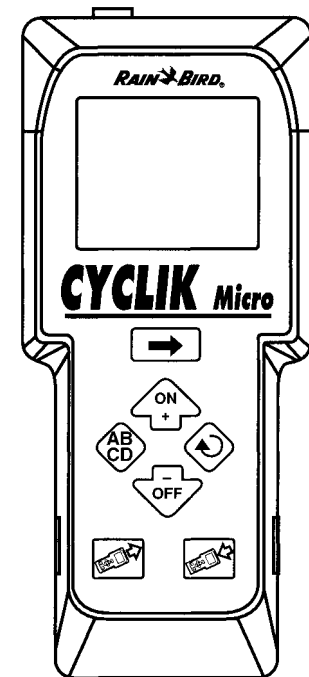


CYCLIK™ Micro A

Mode A Quick-Start Programming

Use with a 1, 2, or 4 station control module


■ INSTALL BATTERY

N.1

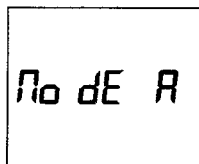


while the transmitter is being used (N.1).


N.2

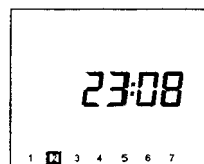


N.3

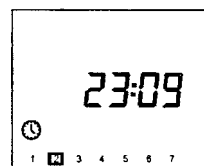

N.4

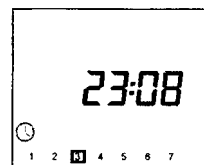

N.5

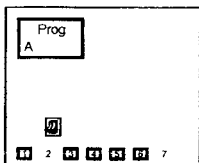

possible). Use the key to move through the days (1 to 7, 1 = Monday). The number/day you are on will blink. Use the key to maintain and to cancel watering on that day. A day with a square around it is a water day.

■ CHOOSE MODE A

Press and simultaneously to select MODE A. The selected Mode will appear for 3 seconds. Afterwards, no icon indicating the selected Mode will appear

■ SET CURRENT TIME

As soon as the battery is connected, the standby screen appears (N.2). The field transmitter can now be programmed. If the screen is blank, press the key once to activate the field transmitter. Press the key again. The clock symbol will appear (N.3). Use the or keys to set the current time.


■ SET CURRENT DAY

Using the key to place the square on the current day of the week (N.4). Monday = 1...Sunday = 7
Example: 11:08PM, Wednesday

■ SET DAYS OF THE WEEK TO WATER


Press the key to display the calendar icon (N.5). Use the key to select the program (4 different programs are

N.6

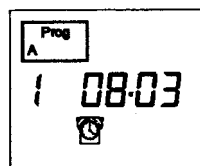

indicates the start time (1-8). 1 = 1st start time (N.6). Use and to set the first start time, then press . The run time icon will appear.


N.7

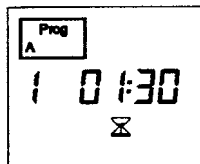


programs (A,B,C, or D) you plan to use. **Important:** If you do not plan to use all of the available programs (A, B, C or D), be sure to enter --|-- as the start time for all unused programs.

To cancel a start time, use the key to slowly display all the start times. When the start time you wish to cancel appears, hold down the key for at least 2 seconds. A start time can also be cancelled by using the and keys to move the --|-- position between 11:59 and 12:00 or 23:59 and 00:00.

N.8a

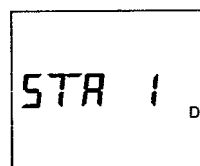

N.8b

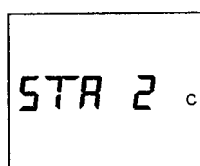

to assign the other stations in the control module to a program (N.8b).

Important: If you want to operate stations simultaneously, you may do this by using different programs (A,B,C, or D) for the stations that need to operate at the same time.

Caution: If the same program is assigned to several stations, they will not operate simultaneously, but will operate only in sequential order.

■ SET IRRIGATION START TIMES (1-8) AND RUN TIMES

Press the to display the start time icon . Select the program with the key. The number on the left

Set the desired run time (N.7) with and . Press to program the start time and run time for the 2nd start time. Repeat the above procedure for all start times that are required. Repeat for all

■ ASSIGN PROGRAMS TO STATIONS

After entering the program (A, B, C and D) start times and run times, you must decide which stations are assigned to the programs when using a control module with more than one station.

Repeatedly press until you see the screen STA 1. Then press the key to assign station 1 to the program you wish (N.8a). Use and

■ TRANSMISSION TO CYCLIK CONTROL MODULES

Connect the field transmitter to the Control Module. Press to activate the LC screen if it is blank. Press . The transmission icon will appear for 2 seconds.


Note: If there is a transmission problem (poor connection, dirty connector, lack of battery or dead battery, etc.) you will hear 3 "beeps" and this screen will appear.

Important: If the blinking battery icon is displayed on the LCD during program transmission, replace the 9V battery in the Cyclik control module.

N.9



N.10

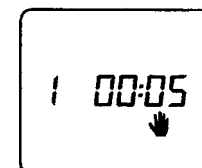

number is shown to the left of the manual run time (N.10). Connect the field transmitter to the control module and press to start irrigation. You may stop a manual irrigation by selecting the station, connect the transmitter to the control module, and press .

To start a pre-assigned combination of program and station, press until N.9 appears. Next repeatedly press until the desired program appears. Connect the field transmitter to the control module and press to start irrigation. You may stop a manual irrigation by selecting the station, connect the transmitter to the control module, and press .

Note: When operating in manual, the field transmitter and the control module must be in the same mode (mode A or mode B). If the field transmitter is in a different mode than the control module, the control module will send a signal back and will put the transmitter in the same mode as the control module. If this happens, refer to the manual start instructions for the mode that the control module is in.

MANUAL FUNCTIONS

■ MODE A: MANUAL START

You can manually start a station either by entering an irrigation run time or by starting a pre-assigned program. To start manually (independent of a program), repeatedly press the key to display this screen (N.9). Enter a run time with the and keys (N.9). Next, push the key to select a station. The station