



Ref.	Part Description	20JH	20 ADJ-B
<b>UPPER ASSEMBLY</b>			
1	Fulcrum Kit	177415	-
2	Fulcrum Pin	(100793)	(100793)
3	Arm Hood	(100775)	-
4	Arm Spring Assembly	177525	(104984)
5	Arm Spring	(100133)	(106330)
<b>NOZZLES (Specify nozzle size when ordering)</b>			
6	Straight Bore	105780	-
-	Nozzle & Vane Assembly	106160	-
-	Nozzle	105780	-
-	Vane	101618	101618
7	Adjustment Screw	-	100136
8	Spring	-	100203
<b>BEARING ASSEMBLY</b>			
9	Bearing Assembly	177422	(109220)
10	Top Seal Washer (White)	(100279)	-
11	Metal Top Seal Washer	(100280)	-
12	Bearing Spring	(105431)	-
13	Bearing Sleeve (Brass)	(104153)	(104983)
14	Bearing Washer (2) (Black)	(104181)	(104181)
15	Wear Washer (White)	(104696)	(104696)
16	Bearing Nipple	(102020)	(104982)
17	Bearing Washer Kit	177428	-
10	Top Seal Washer (White)	(100279)	-
11	Metal Top Seal Washer	(100280)	-
12	Bearing Spring	(105431)	-
14	Bearing Washer (2) (Black)	(104181)	(104181)
15	Wear Washer (White)	(104696)	(104696)

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.