



Ref.	Part Description	25BPJ-FP	
		25BPJ-FP-ADJ	ADJ-DA-TNT
UPPER ASSEMBLY			
1	Fulcrum Kit	177461	177461
2	Fulcrum Pin	(100793)	(100793)
3	PJ Arm Spring Assembly	177507	177507
4	Arm Spring (for PJ)	(104933)	(104933)
5	Adjustment Spring	100136	100136
6	Adjustment Pin	100203	100203
TRIP MECHANISM			
7	Upper Trip	(108994)	(108994)
8	Trip Spring	105720	105720
9	Lower Trip Assembly (FP)	(110124)	(110124)
10	Trip Lever	109484	109484
11	Trip Shaft	(104734)	(104734)
NOZZLES (Specify nozzle size when ordering)			
12	Nozzle & Vane Assembly	106160xx	106160xx
13	Nozzle	105780xx	105780xx
14	Vane	101618	101618
BEARING ASSEMBLY			
15	Bearing Assembly	106181	110950
16	Bearing Spring	-	(100182)
17	Skirted Top Seal (Black)	-	(100180)
18	PTFE Top Seal (White)	-	(100181)
19	Bearing Sleeve (B)	106183	177498
20	Bearing Washer (Black)	(104181)	(104181)
21	Wear Washer (White)	(104184)	(104696)
22	Bearing Nipple	104982	177503
23	Friction Collar, STD (A)	104906	104906

(A) STD friction collars 104906 include Quantity 1 per kit.

(B) Two Collars included with Bearing Sleeve

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.