



Note: All parts on the 808A are compatible with the previous 808S-TNT and 808W-TNT models. The Bearing Assembly has been upgraded to the Heavy Duty bearing (HD Style). The Bearing Washer kit listed is fully compatible with the HD Bearing Assembly and can be used to replace the bottom three washers of the TNT Bearing Assembly.

Ref.	Part Description	Qty.	Part Number
------	------------------	------	-------------

UPPER ASSEMBLY

1	Arm Assembly Kit	1	(211843)
2	Fulcrum Pin	1	-
3	Arm Washer	2	-
4	Arm Assembly, Anodized	1	-
5	Arm Spring	1	-

NOZZLES (Specify Nozzle Size when ordering)

6	Spreader Nozzle	1	(A) 100226-xx
7	Spreader Adapter	1	(211777)
7	Nozzle Plug	1	(211774)
8	Range Tube, Anodized	1	(211822)
9	Range Nozzle	1	(B) (211775-xx)
10	Range Nozzle & Tube, #40 nozzle only	1	(212239)

BEARING ASSEMBLY(HD Style)

11	Bearing Assembly(80HD/85HD/808)(NPT)	1	(117376)
11	Bearing Assembly(80HD/85HD/808)(BSP)	1	(105441)
-	80HD/85HD/808 Bearing Washer Kit	1	113879
12	Bearing Seal Washer (Gray)	1	-
13	Bearing Hood (Black)	1	-
14	Wear Top Washer (Black)	1	-
15	Bearing Washer (Black)	1	-
16	Wear Washer (Orange)	1	-
17	Wear Seal Washer (White)	1	-
18	Bearing Spring	1	-
19	Bearing Sleeve	1	-
20	Bearing Nipple	1	-

TOOLS

-	Universal Bearing Wrench (Not Shown)	1	(C) A90919
---	--------------------------------------	---	------------

(A) (Specify Nozzle Size when ordering)

Available Spreader Nozzles: 8,10,12, 14. Use #8 for #26 range,#10 for #28 & #30 range,#12 for #32,#34, $ range, and #14 for#40.

(B) Specify Nozzle Size when ordering.

Available Range Nozzles: 26, 28, 30, 32, 34, 36

(C) Required for maintaining or replacing the Bearing Assembly

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.