



Ref.	Part Description	80EHD	80EHD-LA	80EHD-BSP
<b>UPPER ASSEMBLY</b>				
1	Fulcrum Kit	177421	177421	177421
2	Fulcrum Pin	(100430)	(100430)	(100430)
3	Arm Washer (2)	(100432)	(100432)	(100432)
4	Arm Spring Assembly	(177533)	(177533)	(177533)
5	Arm Spring	(100431)	(100431)	(100431)
<b>NOZZLES (Specify nozzle size when ordering)</b>				
6	Range Nozzle	103043xx	103043xx	103043xx
7	Nozzle Vane	101275	101275	101275
8	Spreader 20 Degree	100226-14	-	100226-14
-	Plug	100255	-	100255
<b>BEARING ASSEMBLY</b>				
9	Bearing Assembly ( H Style)	177427	177427	118039
10	Top Seal Washer, Upper (Black)	(113100)	(113100)	(113100)
11	Hood Bearing	(113098)	(113098)	(113098)
12	Bearing Spring	(100449)	(100449)	(100449)
13	Top Seal Washer, Lower (Black)	(113309)	(113309)	(113309)
14	Bearing Sleeve	177515	177515	177467
15	Bearing Washer (Black)	(113099)	(113099)	(113099)
16	Wear Washer (Orange)	(104639)	(104639)	(104639)
17	Bearing Washer, Seal (Black)	(104638)	(104638)	(104638)
18	Bearing Nipple	177506	177506	177506
19	Bearing Washer Kit	177474	177474	177474
10	Top Seal Washer, Upper (Black)	(113100)	(113100)	(113100)
11	Hood Bearing	(113098)	(113098)	(113098)
12	Bearing Spring	(100449)	(100449)	(100449)
13	Top Seal Washer, Lower (Black)	(113309)	(113309)	(113309)
15	Bearing Washer (Black)	(113099)	(113099)	(113099)
16	Wear Washer (Orange)	(104639)	(104639)	(104639)
17	Bearing Washer, Seal (Black)	(104638)	(104638)	(104638)

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.