



Ref.	Part Description	L20H
UPPER ASSEMBLY		
3	Fulcrum Kit	177415
1	Fulcrum Pin	(100793)
2	Arm Hood	(100775)
6	Arm Washer	(100173)
5	Arm Spring Assembly	177522
4	Arm Spring	(100172)
NOZZLES (Specify nozzle size when ordering)		
16	Straight Bore	105780xx
BEARING ASSEMBLY		
7	Bearing Assembly	177422
8	Top Seal Washer (White)	(100279)
9	Metal Top Seal Washer	(100280)
10	Bearing Spring	(105431)
11	Bearing Sleeve (Brass)	177510
12	Bearing Washer (2) (Black)	(104181)
13	Wear Washer (White)	(104696)
14	Bearing Nipple	177516
15	Bearing Washer Kit	177445
8	Top Seal Washer (White)	(100279)
9	Metal Top Seal Washer	(100280)
10	Bearing Spring	(105431)
12	Bearing Washer (2) (Black)	(104181)
13	Wear Washer (White)	(104696)

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.