



Ref.	Part Description	L36H	L36AH
UPPER ASSEMBLY			
1	Body Cap	NA	NA
2	Arm Spring Assy	(177527)	(177449)
3	Arm	(115063)	(112236)
4	Arm Spring	(114472)	(114472)
5	Arm Washer	(100270)	(100270)
6	Fulcrum Pin	(110726)	(110726)
7	Body	NA	NA
NOZZLES (Specify nozzle size when ordering)			
8	Straight Bore, Quick Fit	107881xx	107881xx
8	Low Pressure, Quick Fit	109247xx	109247xx
BEARING ASSEMBLY			
9	Bearing Assembly	177424	177425
10	Top Seal Washer	(Gr) (103709) (W) (100313)	
11	Metal Top Seal Washer	(100312)	(100312)
12	Bearing Spring	(106237)	(106237)
13	Bearing Sleeve	177511	177511
14	Bearing Washer	(B) (100726) (B) (100726)	
15	Wear Washer	(O) (103058) (O) (104762)	
16	Seal or Brg Washer	(G) (102345) (B) (100726)	
17	Bearing Nipple	177517	177517
18	Bearing Washer Kit	177447	177448
10	Top Seal Washer	(Gr) (103709) (W) (100313)	
11	Metal Top Seal Washer	(100312)	(100312)
12	Bearing Spring	(106237)	(106237)
14	Bearing Washer	(B) (100726) (B) (100726)	
15	Wear Washer	(O) (103058) (O) (104762)	
16	Seal or Brg Washer	(G) (102345) (B) (100726)	

Bearing washer color code: W = White, Gr = Dark Green, B = Black, O = Orange, G = Grey
 *NOTE: Old style L36 has a plastic bearing nipple, while new style L36 has a brass bearing nipple.

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.