



- ① OPERATION INDICATOR
RAIN BIRD MODEL: OPERIND
- ② IRRIGATION CONTROL VALVE:
RAIN BIRD XCZ DRIP CONTROL ZONE KIT OR
PEB OR EQUAL INSTALLED IN VALVE BOX
- ③ QF SUPPLY HEADER
- ④ IN-LINE SPRING CHECK VALVE
- ⑤ PERIMETER OF AREA
- ⑥ PERIMETER LATERALS 2" TO 4" FROM
EDGE OF LANDSCAPE
- ⑦ QF EXHAUST HEADER
- ⑧ XFS-CV RECOMMENDED SPACING
- ⑨ SUB-SURFACE/ON-SURFACE DRIPLINE:
RAIN BIRD XFS-CV SERIES DRIPLINE (TYPICAL)
NON-POTABLE: XFS-CVP DRIPLINE
- ⑩ TIE DOWN STAKES
RAIN BIRD TDS-050 WITH BEND
- ⑪ FLUSH POINT (TYPICAL)
SEE RAIN BIRD DETAIL "XFS-CV FLUSH POINT"

NOTES:

1. FOR ALL QF HEADER CONNECTIONS INSTALL TLF
SERIES TWIST LOCK FITTINGS
2. RECOMMENDED MINIMUM FILTRATION: 120 MESH
3. PRESSURE AT FLUSH VALVE SHALL BE MIN 14.5 PSI
4. MAX 10' OF WATER(ELEVATION CHANGE)
5. REFER TO MAXIMUM LENGTH OF A SINGLE LATERAL
CHART
6. CHECK VALVE TYPE AND SIZE SHALL BE SPECIFIED
BY ORIENTATION AND FLOW REQUIREMENTS NOT LINE
SIZE

D XFS-CV SUB-SURFACE/ON SURFACE DRIPLINE 05-17-2017
1 VALVE - TOP OF SLOPE LAYOUT W/ QF HEADER N.T.S.