




ESP LX-IVM Controller Quick Reference Guide

 **AUTO** The controller operates automatically when the dial is set to AUTO.

 **OFF** The controller suspends all irrigation when the dial is set to OFF.

ALARM Light illuminates if conditions affect irrigation.

See ESP LX-IVM User Manual for more details.

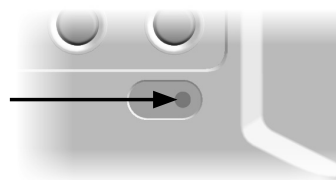

Auto > Alarm

Auto
Fri 9:15 AM
2 February 2018
Alarm

Review Alarms

No Water Days
No Run Times
No Start Times
No PGM will AUTO Run

Alarms are Displayed
More Next

Date /Time

Set Date and Time
7:00 AM
Wednesday
9 Feb 2018

Set Time

Set Date and Time
7:00 AM
Wednesday
9 Feb 2018

Set Date

Run Times

Set Run Times
PGM 1
Station 01 HH:MM 00:00

Choose Station

Set Run Times
PGM 1
Station 01 HH:MM 00:10

Set Run Time

PGM 1
Copy run time HH:MM 00:10
To all stations between 02 - 06

Copy Run Time

Water Days

PGM 1 Mon On
By Day of Week Tue Off
Wed On
Thu Off
Fri On
Mode ↑ ↓ Off On

Select Water Days

PGM 1 Mon Yes
Cyclic Days Tue No
Water every 03 days Wed Yes
Start 31 Oct 2017 Thu No
Allow Watering > Fri Yes

Cyclic Days

PGM 1 Mon No
Even days Tue Yes
Wed No
Thu Yes
Allow Watering > Fri No

Even Days

PGM 1 Mon Yes
Odd days Tue No
Wed Yes
Thu No
Allow Watering > Fri Yes

Odd Days

PGM 1 Mon Yes
Odd days Tue No
Wed Yes
Thu No
Not 31st
Allow Watering > Fri Yes

Odd Days Not 31st

Start Times

Set Start Times
PGM 1
1st OFF

Choose from 8 Available Start Times

Set Start Times
PGM 1
1st 12:15

Set 1st Start Time

Manual Watering by Station

Manual Watering
Start Station
Start Program
MV Water Window
Test all Stations

Start Station

Run Time - Station 001
HH:MM
Custom 00:00
Program 1 07:00
Program 6 16:00

Select Station

Run Time - Station 001
HH:MM
Custom 03:00
Program 1 07:00
Program 6 16:00

Set Run Time

Manual Watering by Program

Manual Watering
Start Station
Start Program
MV Water Window
Test all Stations

Start Program

PGM 1
Manual Watering
Start Program PGM 1

Select Program

Weather Sensors

Weather Sensors
Sensor 1: ON
Sensor 2: OFF
Sensor 3: ---
Sensor 4: OFF
All Off

Set Weather Sensors

Weather Sensors
Sensor 1: ON
Sensor 2: OFF
Sensor 3: ---
Sensor 4: OFF
All Off

Set All Off

Diagnostics - List Not Responding

Diagnostics
Test All Stations
Diagnostics
Confirm Programming

Diagnostics

Diagnostics
List Not Responding
Ping Valve/Sensor
Test Shorted Paths
Controller Output

Choose List Not Responding

List Not Responding at
27Feb2018 12:15 AM
Type # Path
STA 003 3
WS 01 ---

View List

Diagnostics - Ping Valve/Sensor

Diagnostics
Test All Stations
Diagnostics
Confirm Programming

Diagnostics

Diagnostics
List Not Responding
Ping Valve/Sensor
Test Shorted Paths
Controller Output

Choose Ping Valve/Sensor

Ping Valve/Sensor
Station 001
Address: 12345
Voltage: 33.1V
Path: 1

View Status

Diagnostics - Test Shorted Paths

Diagnostics
Test All Stations
Diagnostics
Confirm Programming

Diagnostics

Diagnostics
List Not Responding
Ping Valve/Sensor
Test Shorted Paths
Controller Output

Choose Test Shorted Paths

Test Faulted Paths
Path 1: OK
Path 2: FAULT
Path 3: FAULT
Path 4: OK

Choose Path to Test

Hold Yes to energize Path 1 for testing in the field.
Note: Irrigation will be disabled.

Start Test

Fault Finding Short
Path 1 energized for testing in the field

Test In Field

Diagnostics - Controller Output

Diagnostics
Test All Stations
Diagnostics
Confirm Programming

Diagnostics

Diagnostics
List Not Responding
Ping Valve/Sensor
Test Shorted Paths
Controller Output

Choose Controller Output

Controller Output
Current: 34 mA
Expected Current Range
1m A to 400 mA
Voltage: 34V

View Status