



1 Install Internal Cellular Antenna

- (Plastic case cabinet only)

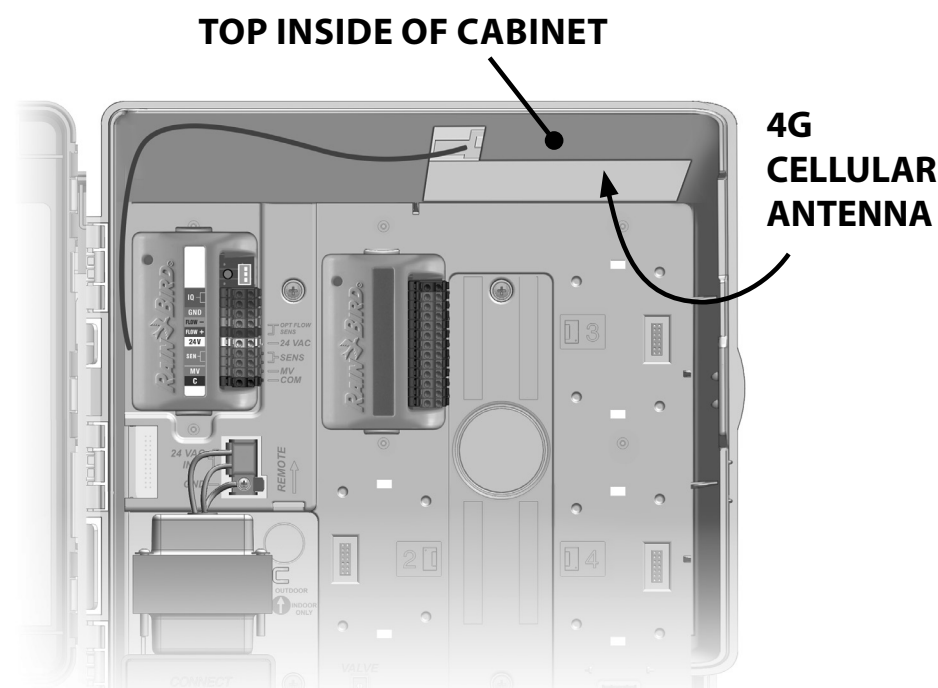

2 Cellular Antenna Connection

- External cellular antenna required for metal cabinets

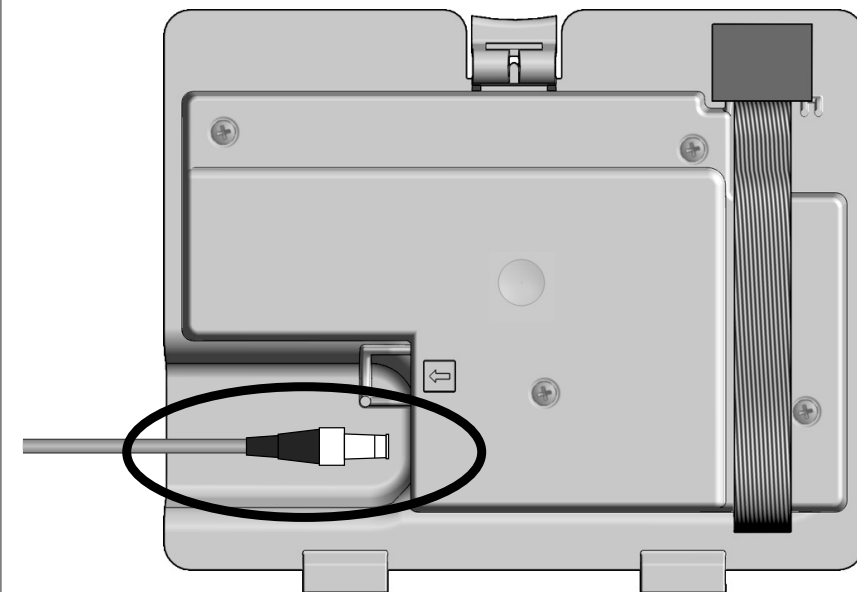


3 Configure Cartridge

- See User-manual for Server/Client Configurations

For LXD and LXME:


- Turn the controller dial to ETM/IQ Settings.

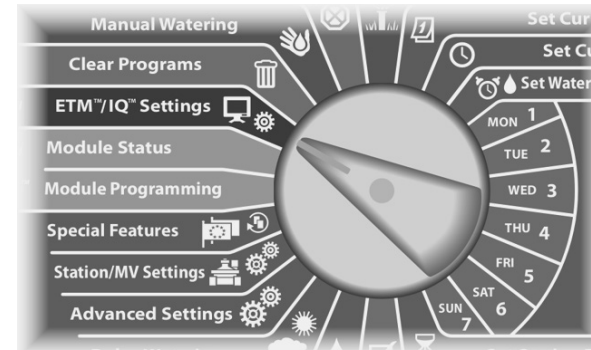


For LX-IVM:

- Turn the controller dial to Advanced Settings and choose Configure Cartridge.

- ➊ The IQ Settings main menu is displayed. Use the UP or DOWN arrows to select Setup Wizard; press Next.

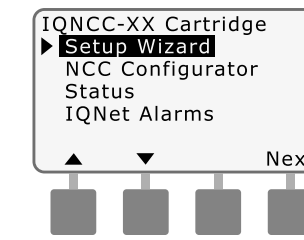


- ➋ The Setup - Satellite Type screen is displayed. Use + or - to select Direct; press Next.

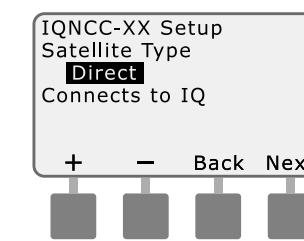


4 Verify Cellular Connections

- IQ port status should be IDLE

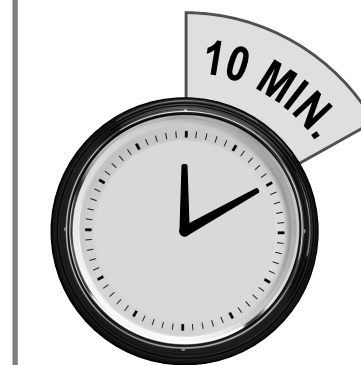


NOTE:
Cellular connection may take 10 minutes or more.


- ➊ The IQ Settings main menu is displayed. Use the UP or DOWN arrows to select Status; press Next.

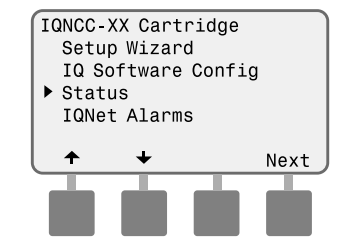

- ➋ The Satellite Status screen is displayed. Current status of IQ, Radio and CM ports are shown.

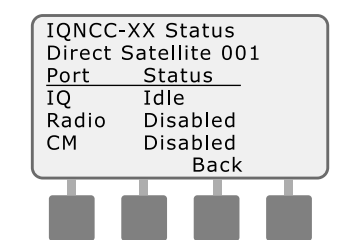


5 Get IP Address from the Sticker on the Back of the Cartridge

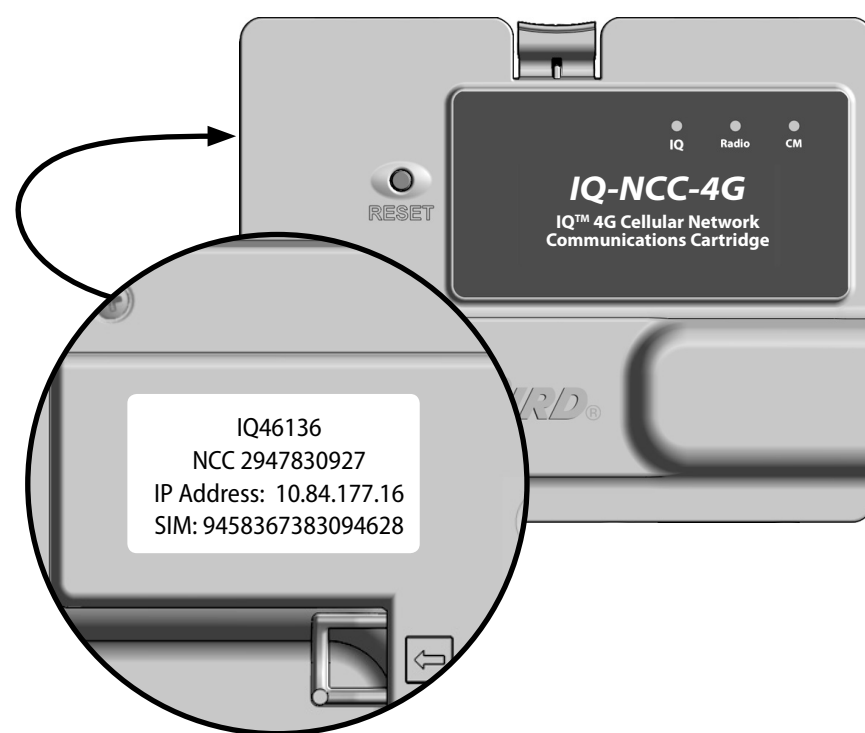



6 Go to IQ4.RAINBIRD.COM

- ➊ Enter User Name & Password to Logon to IQ4.

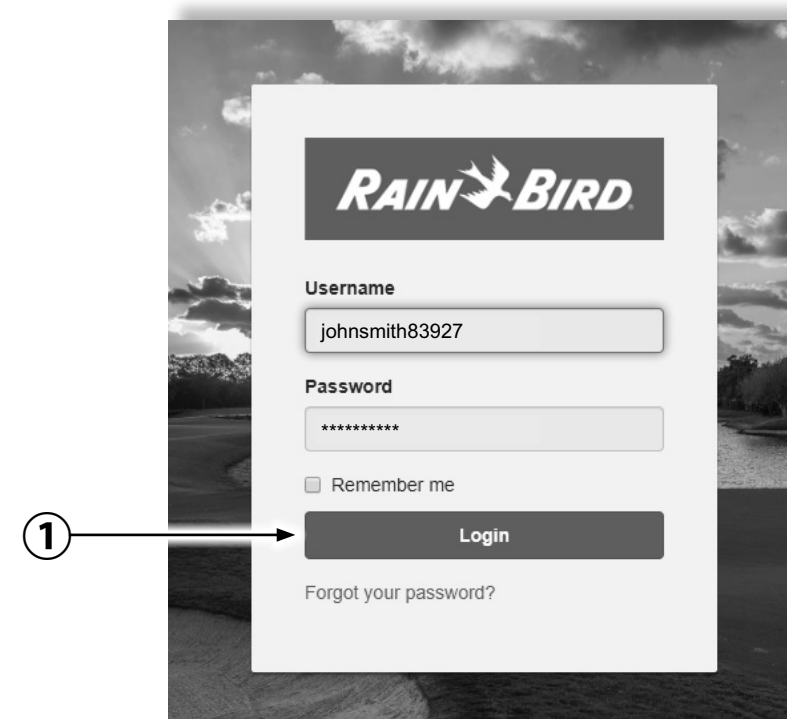



7 Add Site

- ➊ Click Orange + button.
- ➋ Enter Site Name.
- ➌ Enter Description (optional).
- ➍ Click SAVE.

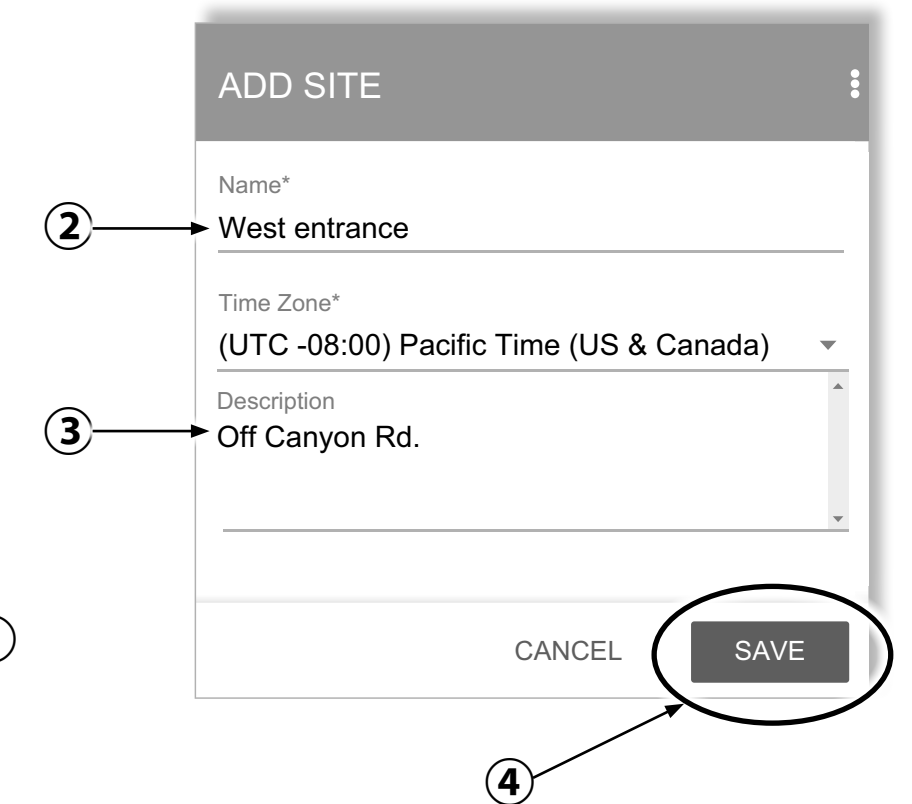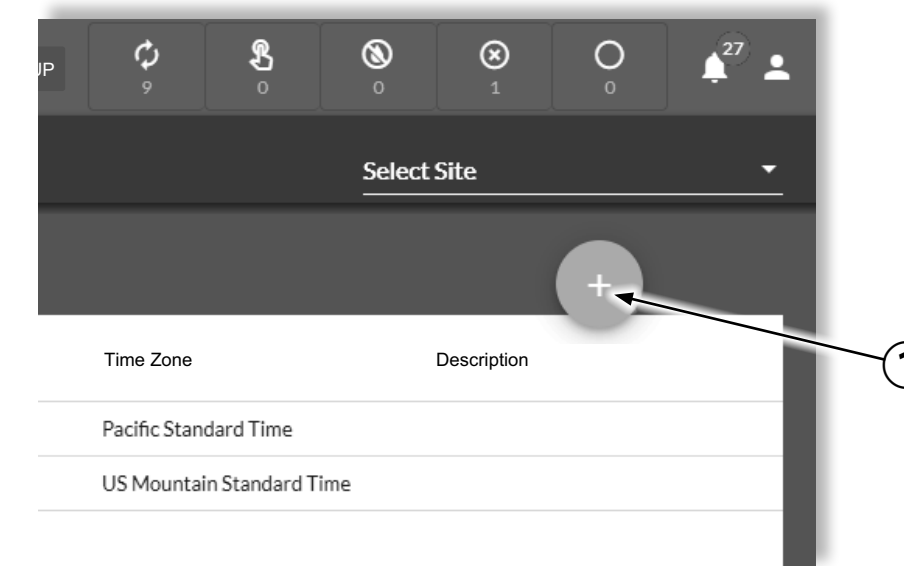


8 Add Satellite

- ➊ Choose the CONTROLLERS Tab.
- ➋ Click Orange + button.
- ➌ Select ESP-LX Controller Type.

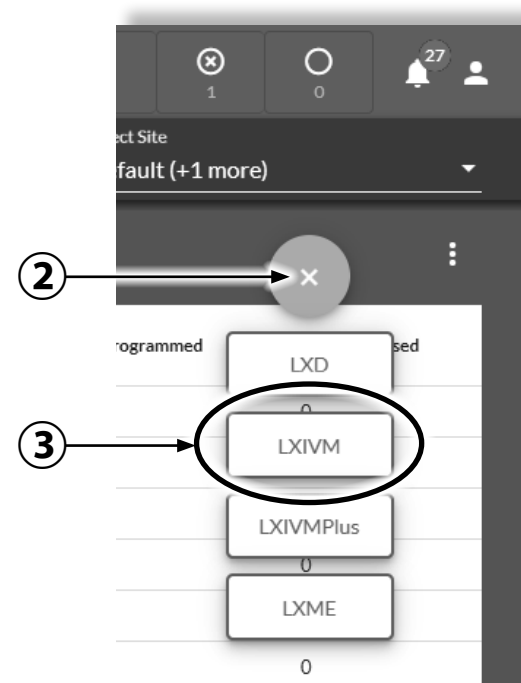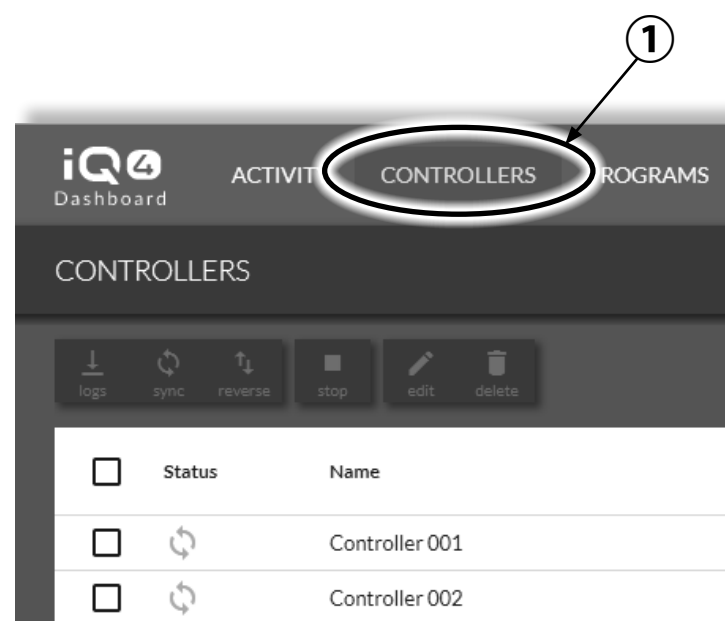

9 Select Configuration and Stations

- ➊ Select Site.
- ➋ Select IQNet Type.
- ➌ Select IP Connection Type.
- ➍ Enter IP Address from cartridge sticker.
- ➎ Click SAVE.

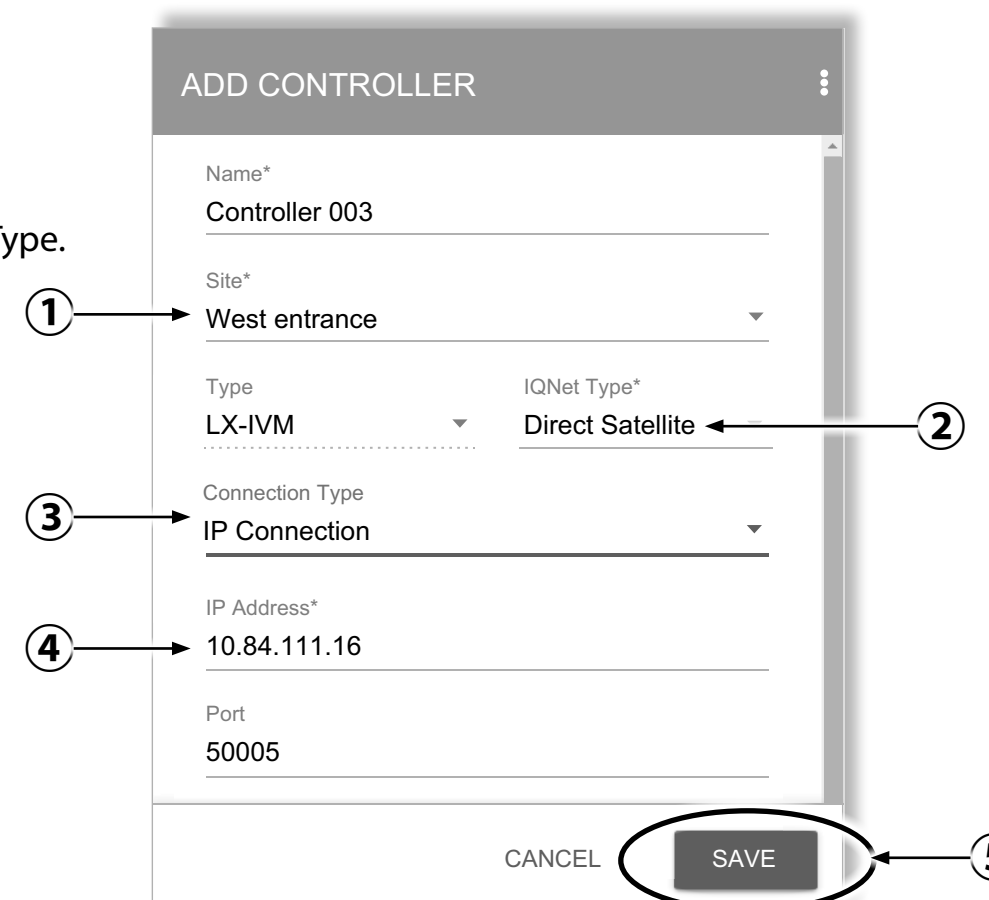

10 Reverse Sync Data from Controller

- ➊ Select which Controller to Reverse Sync.
- ➋ Click the Reverse button.

