



Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.

## 95DR / 95DS / 95DH INTERNAL ASSEMBLY

Ref.	Part Description	95DR	95DS	95DH
1	INTERNAL ASSEMBLY(A)	208236-xx	208236-xx	208236-xx
<b>COVER ASSEMBLIES</b>				
2	Cover Screws, Standard	200974	200974	200974
3	Steel Retainer	202685	202685	202685
4	Plastic Sand Cover	204749	204749	204749
5	Plastic Cover (Purple)	208625-09	208625-09	208625-09
<b>UPPER ASSEMBLY (New Threaded Fulcrum Pin Version)</b>				
6	Arm/Body Assy	-	-	-
-	Body/Fulcrum Pin Assy	202686	202686	202686
7	Fulcrum Nut	(B)	(B)	(B)
8A	Cover Support Assy Threaded	-	-	-
9	Cover Support	-	-	-
10	Arm Hood	-	-	-
11	Arm Spring	202699	202699	202699
12A	Fulcrum Pin-Threaded	(B)	(B)	(B)
13	Body	-	-	-
14	Upper Trip Shaft	-	-	-
15	Lower Trip Shaft	-	-	-
16	Stop Pin	-	-	-
17	Arm Assembly	-	-	-
18	Arm	-	-	-
19	PJ Tube Assembly	-	-	-
20	Pushnut (3)	203638	203638	203638
21	Arm Bushings (2)	202826	202826	202826
33	Zinc Anode Kit	-	-	-
<b>OLDER NON THREADED FULCRUM PIN PARTS</b>				
8B	Cover Support Assy Non-Threaded	203285	203285	203285
9	Cover Support	-	-	-
10	Arm Hood	-	-	-
11	Arm Spring	202699	202699	202699
-	Fulcrum Pin Repair Kit Non-Threaded	210068	210068	210068
7	Fulcrum Nut	-	-	-
12B	Fulcrum Pin-NON THD'D	-	-	-
22	Set Screw	-	-	-
<b>TRIP MECHANISM</b>				
23	Upper Trip Assembly	-	-	-
24	Lower Trip Assy (Post-6/94)	211186	211186	211186
25	Trip Spring	(C)	(C)	(C)
26	Spacer Washers (3)	(C)	(C)	(C)
27	E-Ring (2)	(C) 200975	(C) 200975	(C) 200975
28	Lower Trip Assy (Pre-6/94)	202848	202848	202848
29	Trip Lever (Pre-6/94)	-	-	-
<b>NOZZLES (Included in Arm/Body Assembly # 6)</b>				
29	Drive Nozzle	-	-	-
30	Range Nozzle Assy	(D)204182-xx	204182-xx	204182-xx
31	O-Ring	203316	203316	203316
32	Vane202441	202441	202441	202441
<b>BEARING ASSY (Sandboot Style)</b>				
34	Bearing Hood	(E)	(E)	(E)
35	Bearing Spring	(E)	(E)	(E)
-	Sandboot Kit	208468	208468	208468
36	Spring Support Washer	(E)	(E)	(E)
37	PTFE Top Seal Washer	(E)	(E)	(E)
38	Upper Brg Seal Washer	(E)	(E)	(E)
39	Bellows/Bearing Guide	(E)	(E)	(E)
40	Retract Spring	-	-	-
41	Buna N Guide Seal	(E)	(E)	(E)
42	Friction Collars (2)	202429	202429	202429
43	Bearing Sleeve Assembly	203126	203126	203126
44	Brg Washer (Black) (2)	(E)	(E)	(E)
45	Wear Washer (Gold)	(E)	(E)	(E)
46	Upper Snap Ring	208395	208395	208395
47	Seal, bearing Guide (Red)	211239	211239	211239
48	Bearing Nipple	202928	202928	202928

(A) Specify Range Nozzle Size - 26, 30

(B) Included in Fulcrum Repair Kit # 211022.

(C) Included in Trip Spring &amp; Washer Kit # 209361.

(D) Specify Range Nozzle Size - 18, 20, 22, 24, 26, 28, 30.

(E) Included in Bearing Washer Kit # 204179.

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.