


1. REMOVE FRONT TWO 1/2" TAMPER PROOF SCREWS FROM CAP
2. INSTALL SOD CUP OVER CAP
3. INSTALL TWO 3/4" TORX SCREWS THROUGH SOD CUP INTO CAP

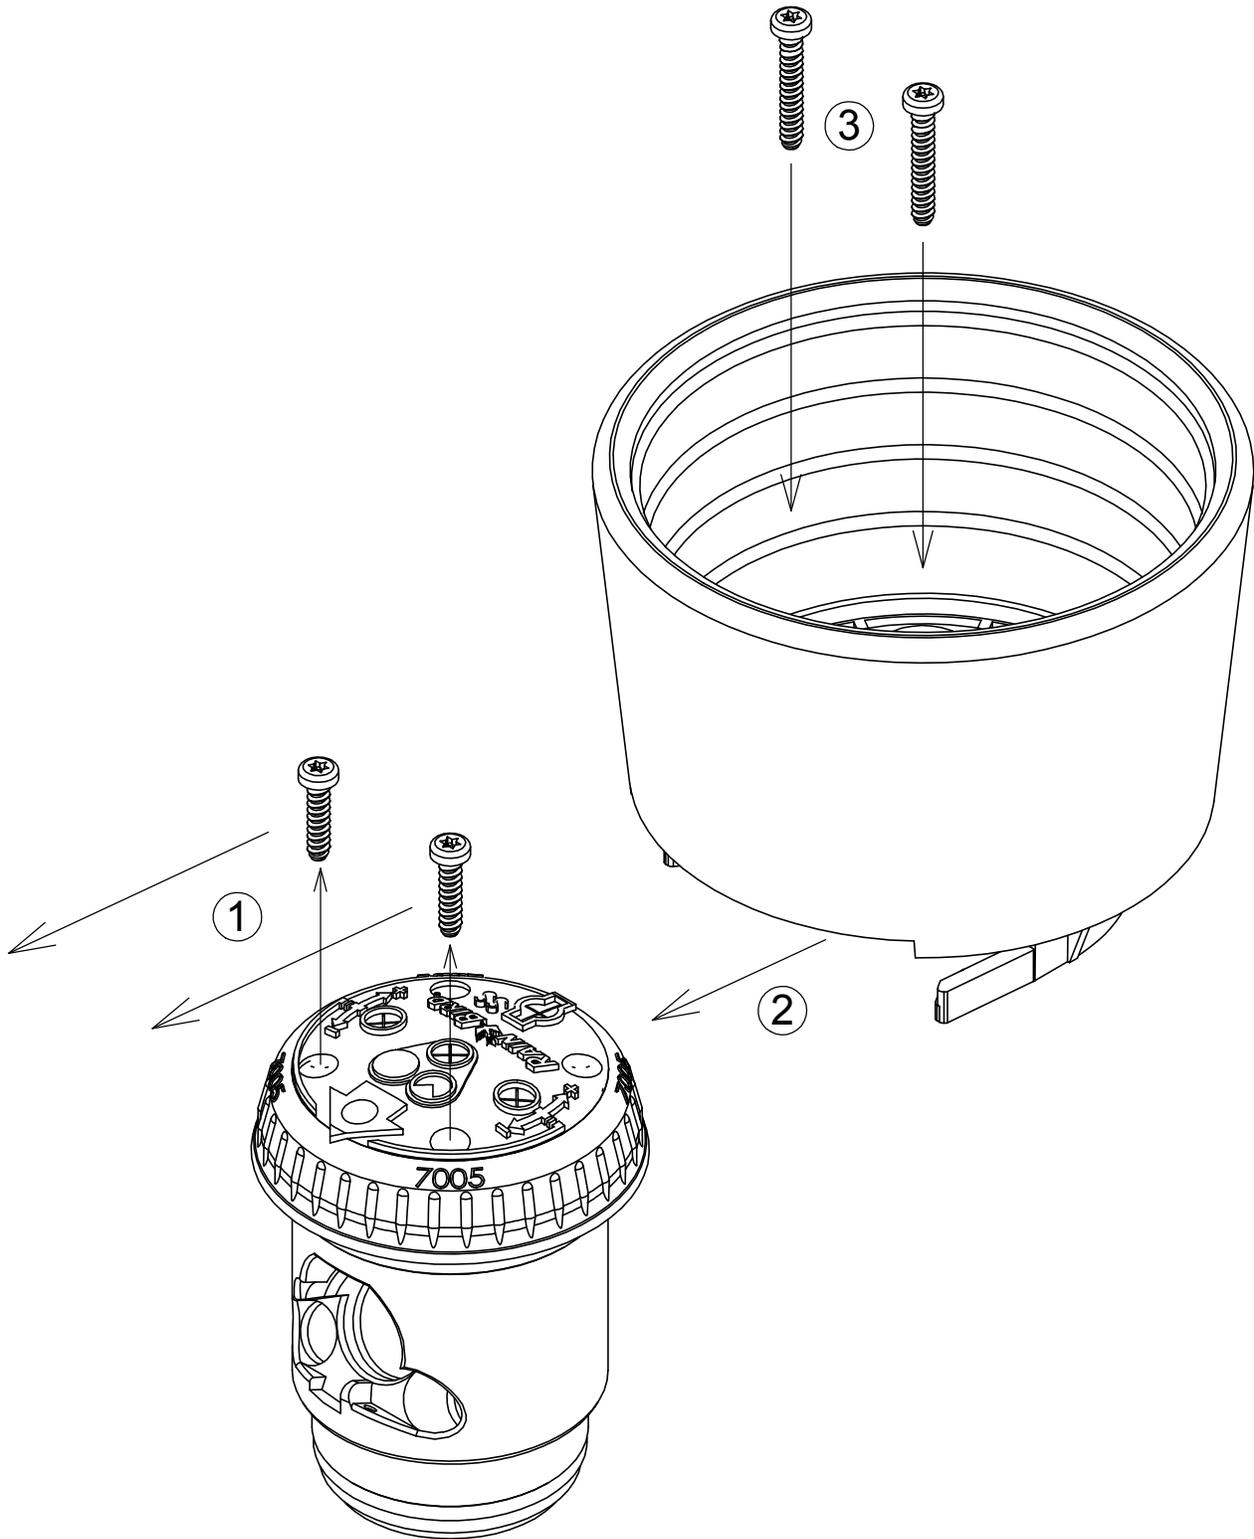

SOD CUP INSTALLATION USING TORX SCREWS